

Noritake

Noritake Porcelain Mat and Porcelain Cotton


Porcelain Mat, Cotton can be used for firing porcelain in a stable condition from single crowns to long-span bridges. Even if porcelain is placed and fired directly, it will not stick and deformation of the metal frame due to its own weight can be minimized.

Example of Porcelain Cotton Usage

It can be used to support refractory model with poor stability when firing, or porcelain inlays, Crowns and laminates can be placed directly on cotton and fired.



Take the required amount of cotton. You can make any shape you want.

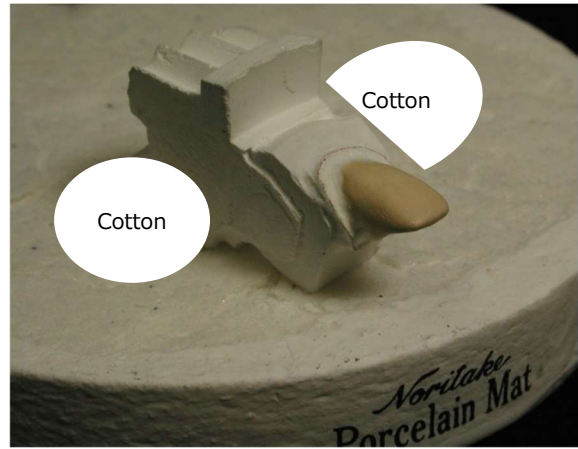

Supports unstable dies such as refractory die from falling.



Can be fired directly on cotton, such as porcelain inlays.